



AHT Liftgates, LLC

309 Mogie Ln.

Acworth, Ga. 30102

(770) 425-5480

E-Mail: parts@ahtliftgates.com

Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
PLATFORM WILL NOT OPEN	<i>1) No current on tilt valve in power pack</i>	- Check for current at tilt valve (inside valve) by energizing "OPEN" button. If no current replace solenoid
	<i>2) If current to solenoid</i>	- Switch the two valves in power pack (outside is lift valve & inside is tilt valve) Clean the valve and blow out with air. Switch valves. If it starts working then valve needs replaced.
	<i>3) Flow Control valve is closed.</i>	- Flow control valve is on the block opposite the C30 cartridge valves. Loosen nut and turn valve stem counter clockwise. Retighten nut.
	<i>4) Shuttle valve is defective</i>	- Remove shuttle valve, dismantle it and blow it out with air. Reassemble and reinstall. Be careful not to over tighten. If still not working replace.
	<i>5) Mechanical Hose Burst Valve Defective or out of adjustment.</i>	- Mechanical Hose Burst Valve screws into top of cylinder. Remove from cylinder, clean & adjust. Check small screw that adjusts flow. Replace if defective